

## "F" Menu

---

Simplified functions menu.

F1	Total Stop	U1	New user
F2	CX input	U2	Remove user
F3	CY input	U3	Remove all
F4	CZ input	U4	Decode radio-frequency
F5	Safety devices test		
F6	Maintained action	H1	Software version
F7	Command 2-7		
F9	Obstruction block		
F10	Gate open warning light		
F11	Exclude Encoder		
F12	Slowed-down start		
F14	Sensor type		
F18	Light on E3		
F19	Automatic closing time		
F20	Partially close time		
F21	Preflashing time		
F25	Courtesy light time		
F28	Opening time		
F29	Closing time		
F30	Opening slow-down time		
F31	Closing slow-down time		
F34	Gate travel sensitivity		
F35	Slow-down sensitivity		
F36	Partially open point		
F37	Opening slow-down point		
F38	Closing slow-down point		
F49	RSE1		
F50	Saving data		
F51	Reading data		
F 54	Opening direction		
F56	CRP address		
F58	Total maneuvers		
F63	RSE1 speed		
F65	RIO ED T1		
F66	RIO ED T2		
F67	RIO PH T1		
F68	RIO PH T2		
A1	Type of motor		
A2	Motor test		
A3	Gate-travel calibration		
A 4	Resetting parameters		
A5	View and reset maneuvers		