



ZL19N

**Notes:**  
Connect the following terminals for "Open Only" function:

<u>ZL19N</u>		<u>R433</u>
10	-----	+24v
11	-----	0v
2	-----	CH1
3	-----	CH1

Connect the following terminals for "Open/Close" function:

<u>ZL19N</u>		<u>R433</u>
10	-----	+24v
11	-----	0v
2	-----	CH1
7	-----	CH1

R433

